
GUNLOCK TIMER

(Cannot cut lock head cables)

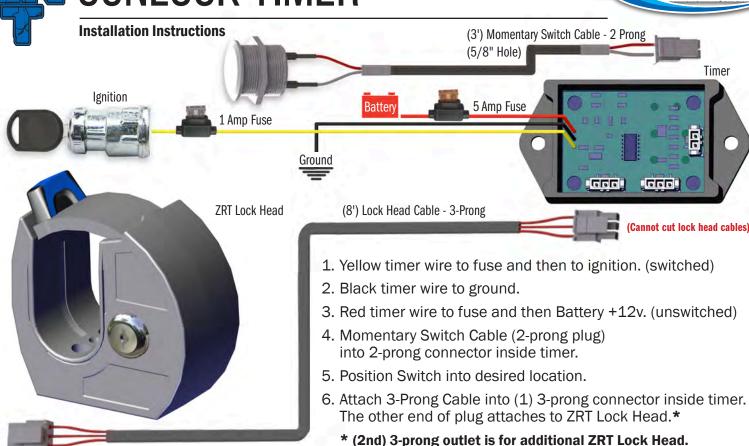








Momentary Switch

Remove switch and use black wire for momentary trigger from siren. White wire remains open. If the momentary switch provided with the timer is not desired and connection to a siren or lightbar controller is preferable, remove the momentary switch and connect the black wire to either a momentary ground source or a momentary 12v source. Some sirens have a switch pre-programmed to 8 seconds. If this is the case, re-program to momentary.

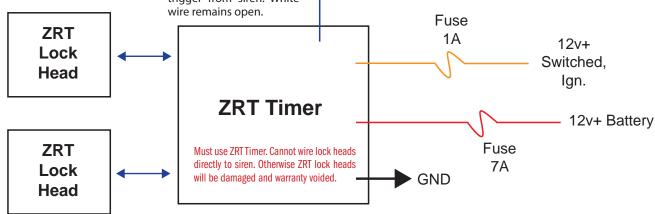



209 W. EASY ST., ROGERS, AR 72756 • JOTTOPUBLICSAFETY.COM • 1/24

Jotto Desk" is a patented product and Registered Trademark of Assembled Products" Corporation.

Specifications subject to change without notice.